


MAINFRAME CLOSED CABINET SERIES

G-CAB/S-CAB-22/32/42U

ASSEMBLY INSTRUCTIONS


V. 1.2

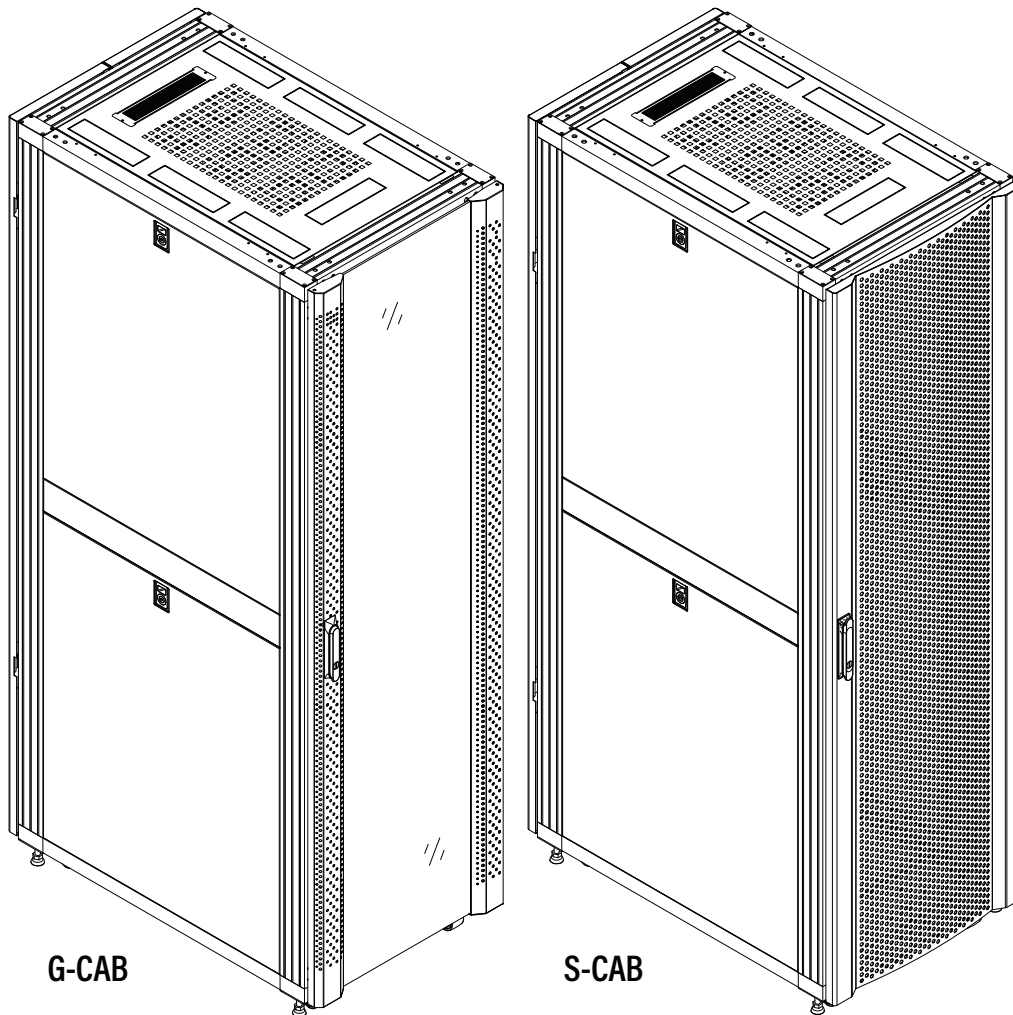

ITEM LIST & REQUIRED TOOLS


PACKAGE 1

Open Frame Server Rack
OFSR-4-22/32/42U

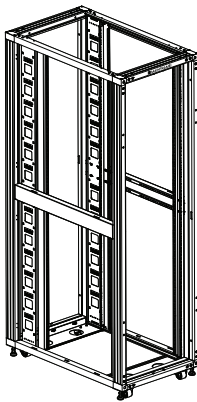


PACKAGE 2

Front & Rear Doors
22/32/42-GL-ST
or
22/32/42-ST-ST

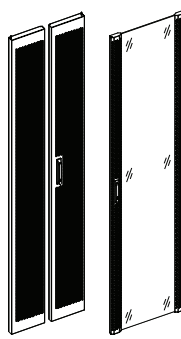


PACKAGE 3

Side Panels
22/32/42-SP4

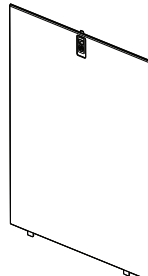

PACKAGE 4

Top & Bottom with 6-Fan Kit
TBF6

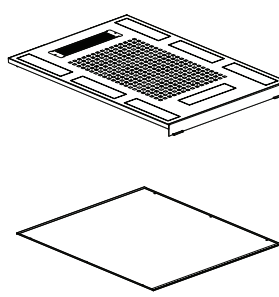

Steel Mesh Rear Door
x 1 pair

22/32/42-GL-ST or 22/32/42-ST-ST

Cable Management Rail
x 2

OFDR-4-22/32/42U

Horizontal Beam
x 2

OFDR-4-32/42U

Side Panel
x 4

32/42-SP4
(x 2 for 22-SP4)

Bottom Plate
x 1

TBF6

Top w/ 6-Fan Kit
x 1

TBF6

Vertical Rail
x 4

OFDR-4-22/32/42U

Front Door
x 1



22/32/42-GL-ST or 22/32/42-ST-ST

Frame
x 2

OFDR-4-22/32/42U

Bottom Panel w/Castors
x 2

OFDR-4-22/32/42U

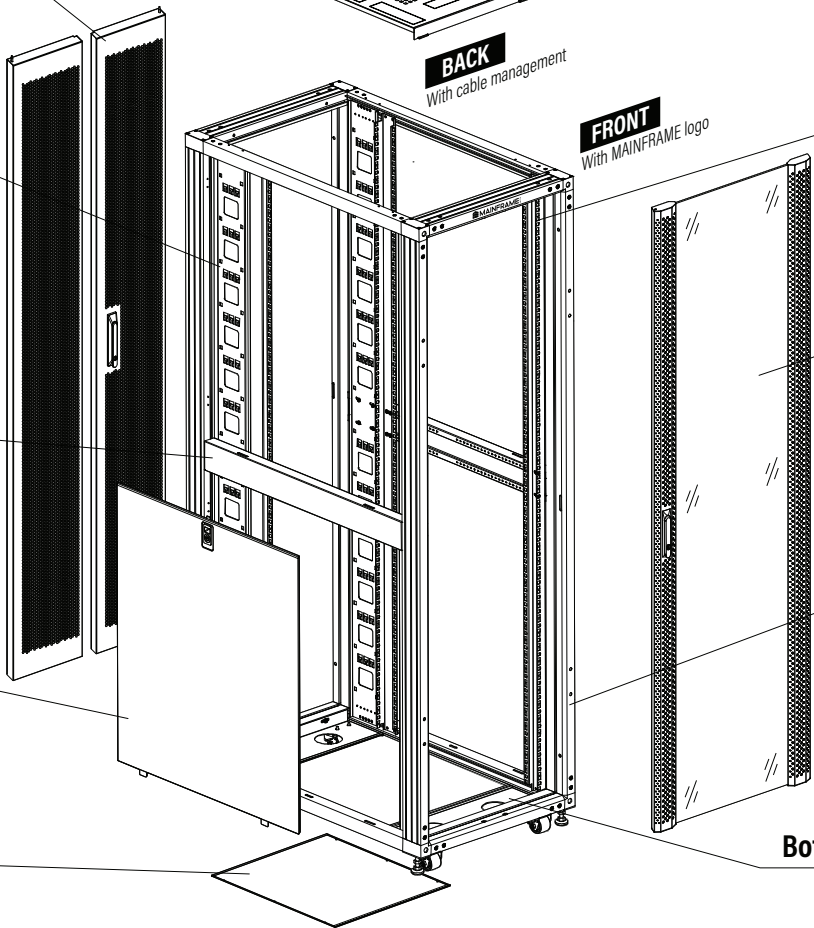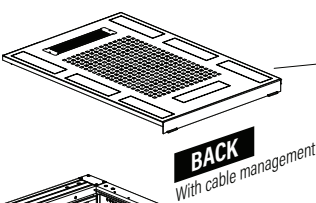

ITEM LIST & REQUIRED TOOLS

PACKAGE 1

Supplied Accessories of **OFSR-22/32/42U**



10-32 Screw and
Cage Nuts
x 50



M6 Countersunk
Head Screws
x 16



M5 Self-tapping
Screws
x 8



Leveling Feet
x 4




Castors
(pre-installed onto
bottom plates)
x 4

BAYING KITS

Use this to join two or more cabinets of the same height side by side to create a multi-bay configuration.



Baying Plates
x 4



M6 Countersunk
Head Screws
x 8

PACKAGE 2


Supplied Accessories of **22/32/42-ST-ST** or **22/32/42-GL-ST**



Key
for Front
x 2




Key
for Rear
x 2



Door Hinge
x 6




M6 Countersunk
Head Screws
x 15

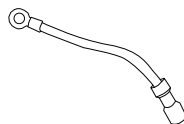

Grounding Wire
x 3



Rubber Washers
x 6



Hooked Cam
(Left)
x 1



Hooked Cam
(Right)
x 1

PACKAGE 3

Supplied Accessories of **22/32/42-SP4**



Side Panel Limits
x 16
* 22U only **x 8**



M4-8
Self-tapping Screws
x 32
* 22U only **x 16**



Key
for Side Panel
x 2

PACKAGE 4


Supplied Accessories of **TBF6**



M5
Self-tapping Screws
x 6

* For installing bottom plate

REQUIRED TOOLS (User-supplied)

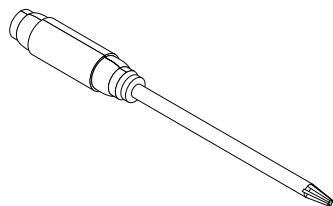


- #1 Philips Screwdriver
- #2 Philips Screwdriver

Confirm the amount of supplied accessories before assembly.

INSTALLATION

1

Unpack the frame assembly (OFSR-4-22/32/42U) and remove the temporary spacers that have 8 x M6 countersunk screws on each side (these screws may be kept as spares).

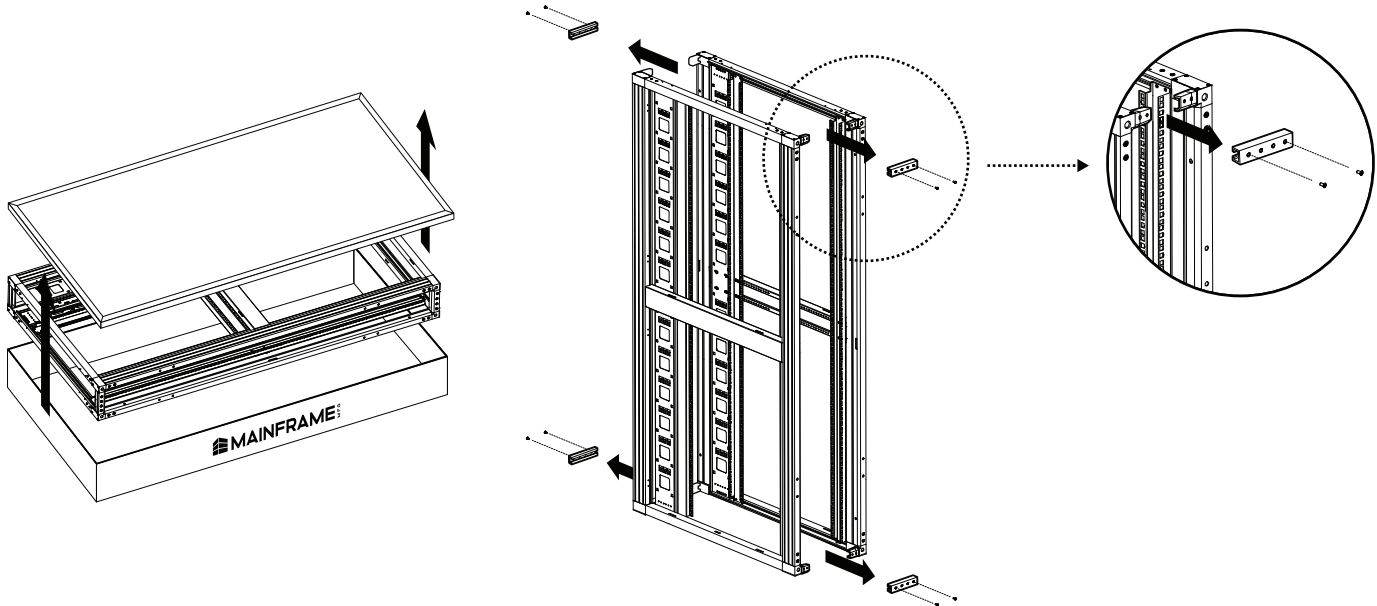


2

Use M6 countersunk head screws to install and connect the aluminum frame and the aluminum side frame.

x 16



M6 Countersunk
Head Screws

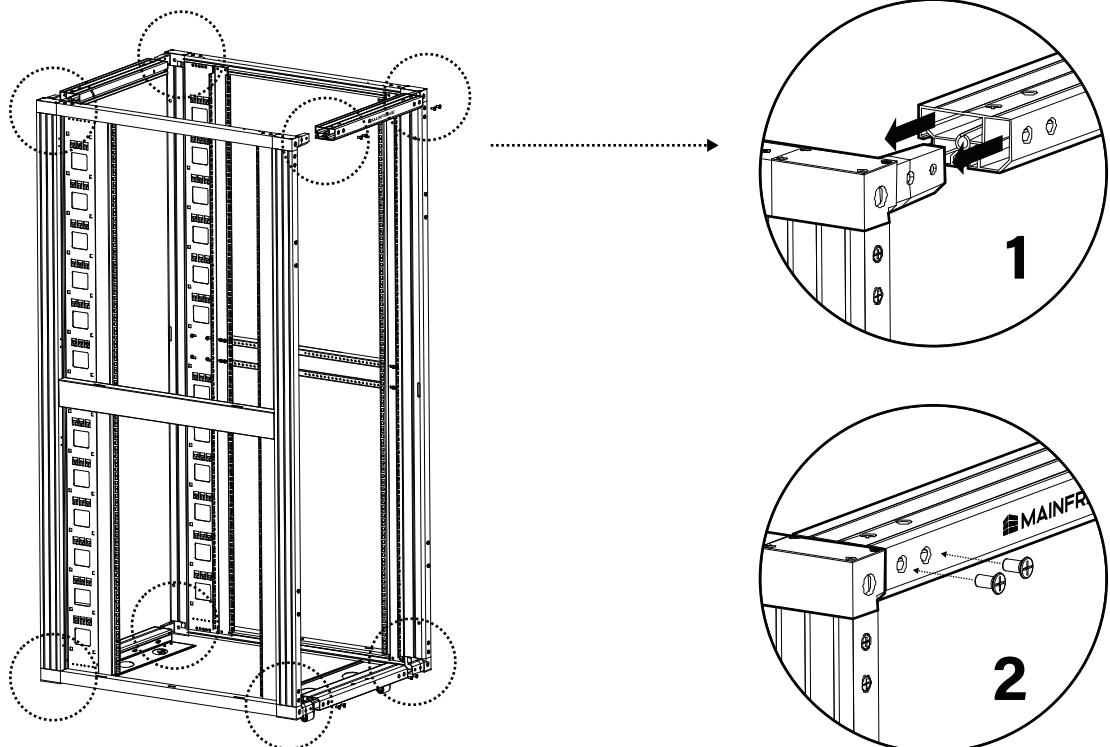

INSTALLATION


3

Use M5 self-tapping screws to mount the front and rear base plates to the bottom left and right beams.

x 8




M5 Self-tapping
Screws

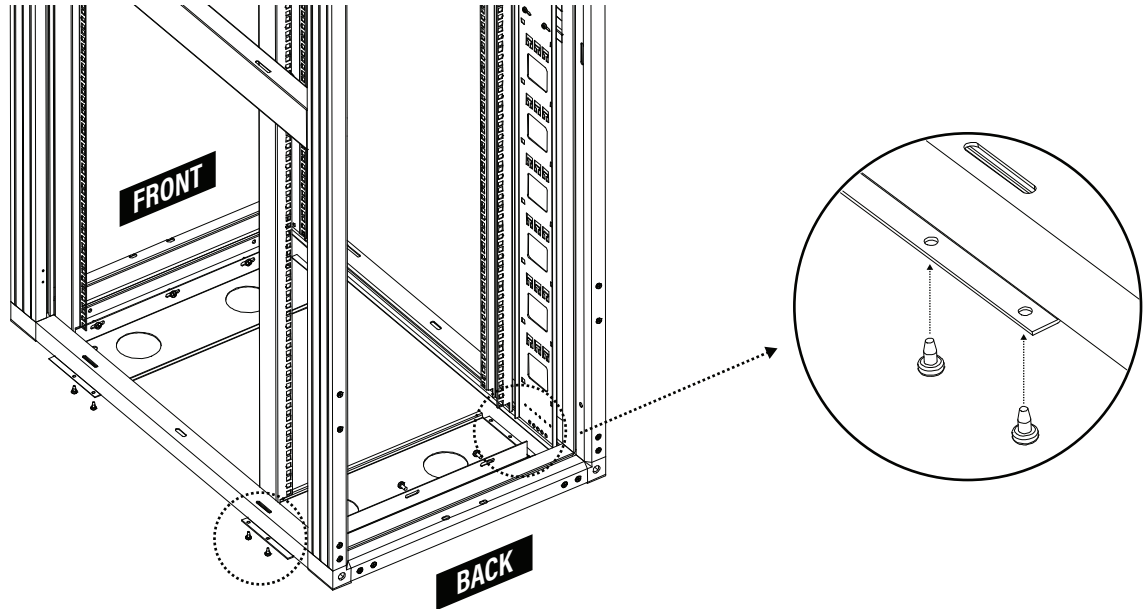


4

Install leveling feet on the four bottom corners.

x 4



Leveling Feet

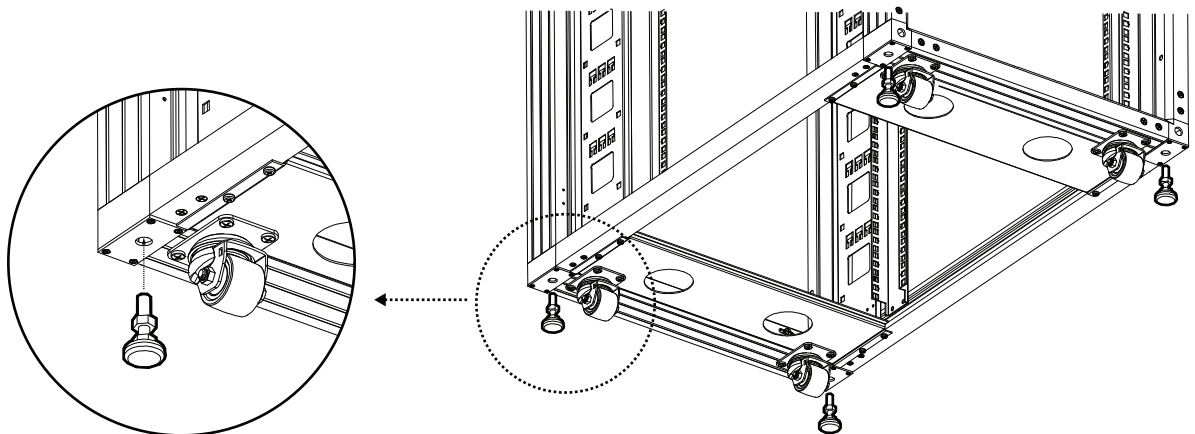

INSTALLATION


5

Use M6 countersunk head screws to install the front and rear door hinges, and install the front and rear doors. Attach the other end of grounding wire to the frame using M6 countersunk head screws and rubber washers.

x 15



M6 Countersunk Head Screws

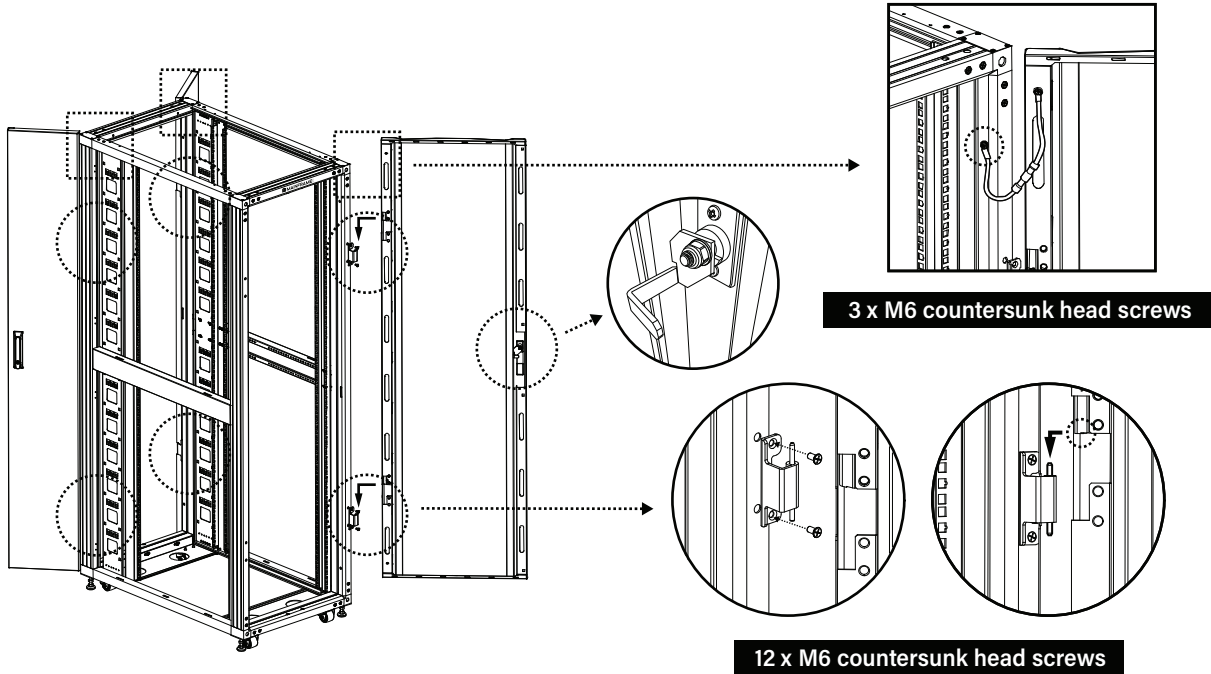

6

Install the fan roof and side panel. Install the side panel door limit with M4-8 self-tapping screws. Using M5 self-tapping screw included to attach bottom plate to the base.

x 16



M4-8 Self-tapping Screws

x 6



M5 Self-tapping Screws

